

REPLACEMENT FOAM SET



RRAC076

 \bigcirc


INSTALL TIME: 5 Mins

REPLACE YOUR FOAM SET


You will need:

- Clean Rag
- **Methylated Spirits / Denatured Alcohol**

(A) Remove the original foam from the Holder by pulling / peeling it free. Using a rag and some methylated spirits / denatured alcohol clean the area where the original foam, ensuring that all the remaining glue has been removed.

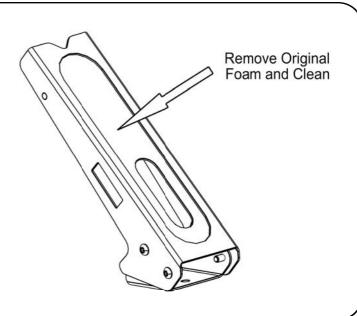

(B) Peel the backing paper off the Replacement Foam to reveal the adhesive back. Position the foam over the holder, adhesive face down, and press firmly into position.

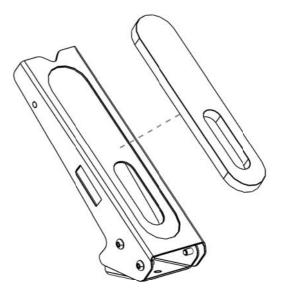

(C) Congratulations, you have completed your installation. Take a step back and admire your work. Good Job!